

## SMOOTH JOYSTICKS FOR MORE GAME TIME

## GET THE TIPS

## GAME JOYSTICK



## INSTRUCTIONS

1.



Use a toothpick to lift the silicone cover under the joystick.

2.



Spray WD-40® Multi-Use Product under the cover. Only pump once.

3.



Rotate the joystick and leave for 2 minutes.

4.



Afterwards, spray 2-3 times of the WD-40 Specialist® Contact Cleaner under the silicone protective cover.

5.



Continue rotating the joystick for 5 minutes. Wipe excess clean.

## WHAT YOU NEED



Scan For More Info

**WD-40®**

① WD-40® MULTI-USE PRODUCT + ② WD-40 SPECIALIST® CONTACT CLEANER  
+ MICROFIBER CLOTH + TOOTHPICK